


Porous Rubber Batter's Box Mats

INSTALLATION GUIDE

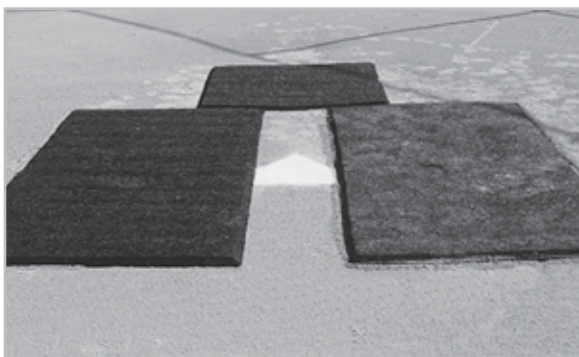

BEACON  **ATHLETICS**

Porous Rubber Batter's Box Mats

Beacon's fortification mats are safe enough to use with plastic, rubber, or metal spikes.

By reducing the depth of holes that develop in your batter's box, these mats will help reduce your maintenance costs while improving the quality of the batting surface.


These mats are made from shredded recycled tire rubber bound together using a polyurethane binder. Each mat is 50" x 40" x 7/8" thick. There are beveled edges on three sides. The fourth side has a square edge that allows you to place two mats together to cover a single batter's box.

A set of 5 mats covers both batter's box and the catcher's box.

INSTALLATION INSTRUCTIONS

NOTE: The installation described below is for installing a set of 5 mats around home plate. If you are only installing one mat, position the mat so the non-beveled square edge is facing toward the backstop [away from the pitcher's mound].


- 1 Lay the mats** on top of the soil as shown in the **Top View** below. The non-beveled edges of two mats (A/C and B/D) should meet at the mid-point of home plate.

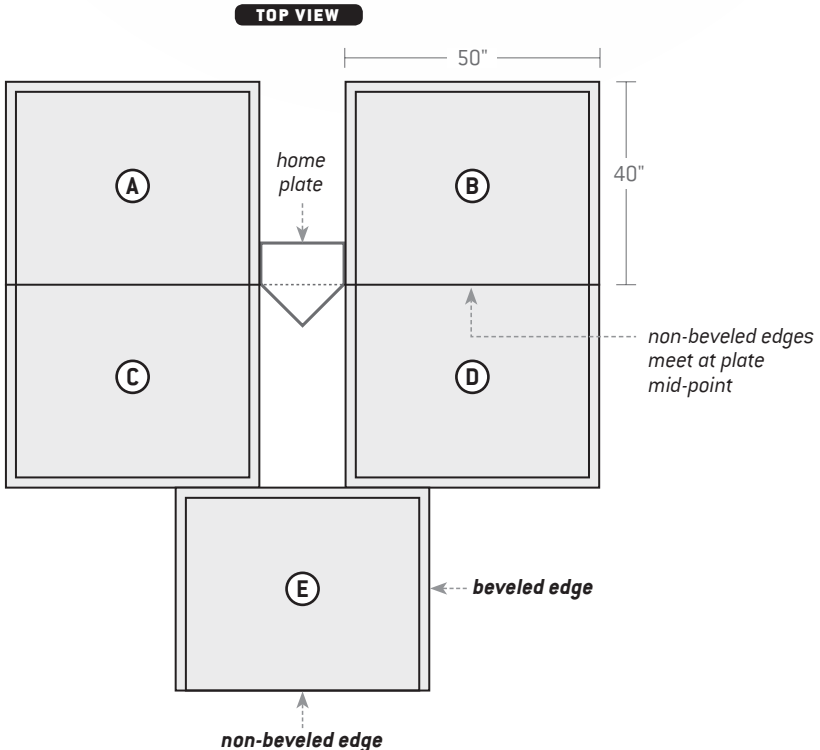



INSTALLATION INSTRUCTIONS *(continued)*

- 2 Scribe a line in the soil around the outside edges of the mat(s) using a tarp pin or other similar tool. This will provide an accurate outline of the area to be excavated.
- 3 Excavate the scribed area to a depth of 2". Be sure the subgrade is perfectly flat and level when finished.
- 4 Place mats in the excavated area and align as shown in Step 1. The surface of the mats should be 1" below the finish grade of the soil surface and the top of home plate, as shown in the Side View below.

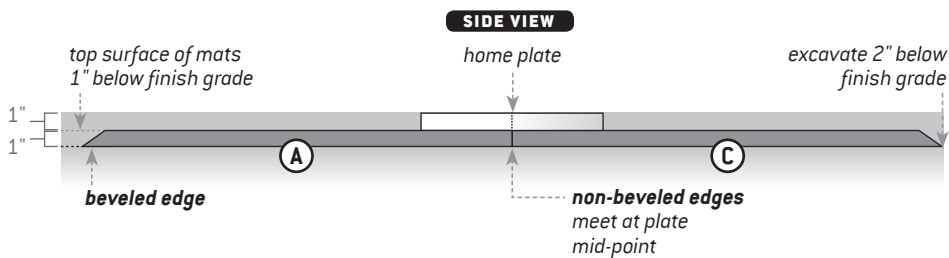

- 5 Backfill with soil that was displaced during excavation. As you are filling in, compact the soil using a tamp, roller, vibratory plate tamp or your feet.
- 6 Rake the area smooth and add water when you are finished backfilling and packing the soil. Water will help the soil settle faster, but be cautious of over watering if a game is scheduled to be played within the next 24 hours.

Consider these Beacon Built innovative products...

Now that you have reinforced your batter's box, check out other ways to become more efficient. Our revolutionary SweetSpot Tamp reinvets the traditional tamp to eliminate vibrations — which means you save your back *and* your hands.

And, sift out the spoils with our smart Sifter Scoop Shovel.
Innovative ways to make your fields better and your job easier.

ACCESSORIES FOR AROUND THE FIELD



SweetSpot Tamp System




Sifter Scoop Shovel

FIELD WEIGHTS FOR X-DRAG OR TARPS



Beacon X-Drag Field Weight Kit

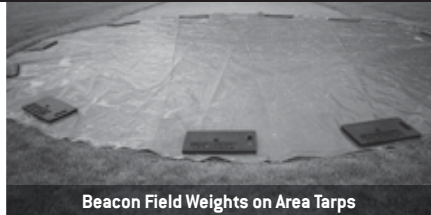

Beacon Field Weights on Area Tarps

TUFFdrag
X-DRAG SCARIFYING DRAG

Field Weights
VERSATILITY FOR TARPS & DRAGS

Make your life easier by using versatile Field Weights on your tarps and your X-Drag. Quickly and easily adjust the weight of your X-Drag, or ditch the tarp pins and sand bags and instead hold your tarps in place with Field Weights.

To learn more about our innovative products, visit BeaconAthletics.com/innovation

BEACON ATHLETICS

BeaconAthletics.com | 800-747-5985 | fax 608-836-0724 | Ballfields.com

8233 FORSYTHIA STREET, SUITE 120, MIDDLETON, WI 53562

© Copyright 2017, Beacon Athletics, A division of Rainbow Group, LLC. All Rights reserved. This material may not be republished, rewritten or redistributed including electronically cached without the prior written consent of Beacon Athletics.

Version 1 rev.2017-10